

AP UTILITY[™]

Wall Mount Enclosure

Owner's Manual



THIS PAGE INTENTIONALLY LEFT BLANK

Table of Contents

Contacting Us & Technical Support 4

Safety First 5

Labeling Information 6

Product Overview 7

Product Specifications 8

Installation 9

Clearance Requirements 11

Grounding 12

Door Latches 13

Warranty Policy 15

Contacting Us

American Products can be contacted for any issues that arise with the supplied product.

Technical assistance is available 9am to 4pm central standard time.

- Toll Free: (855) 736-2135
- Phone: (417) 736-2135
- Fax: (417) 736-9535
- Email: Sales@amprod.us
- Web: www.amprod.us

When calling, please have available, or if faxing or emailing, be sure to provide:

- Part Number _____
- Serial Number _____
- Date of Purchase _____
- Date of Installation _____

Safety First

This publication provides a description of the American Products AP UTILITY™ Enclosure. The mechanical descriptions, typical applications, installation instructions, safety guidelines, grounding and bonding are included.

Four types of messages may appear throughout this manual, identified by the following icons and signal words:

 


Read equipment manufacturer's manual and this material before using this product. Failure to do so can result in serious injury or death.

 DANGER	Indicates a hazardous situation that, if not avoided, will result in death or serious injury. This signal word is to be limited to the most extreme situations.
 WARNING	Indicates a hazardous situation that, if not avoided, could result in death or serious injury.
 CAUTION	Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.
NOTICE:	Indicates information considered important, but not hazard-related (e.g. messages relating to property damage). The safety alert symbol shall not be used with this signal word. When a signal word is used for messages relating to property damage, NOTICE is the choice of signal word.



Important Labeling Information

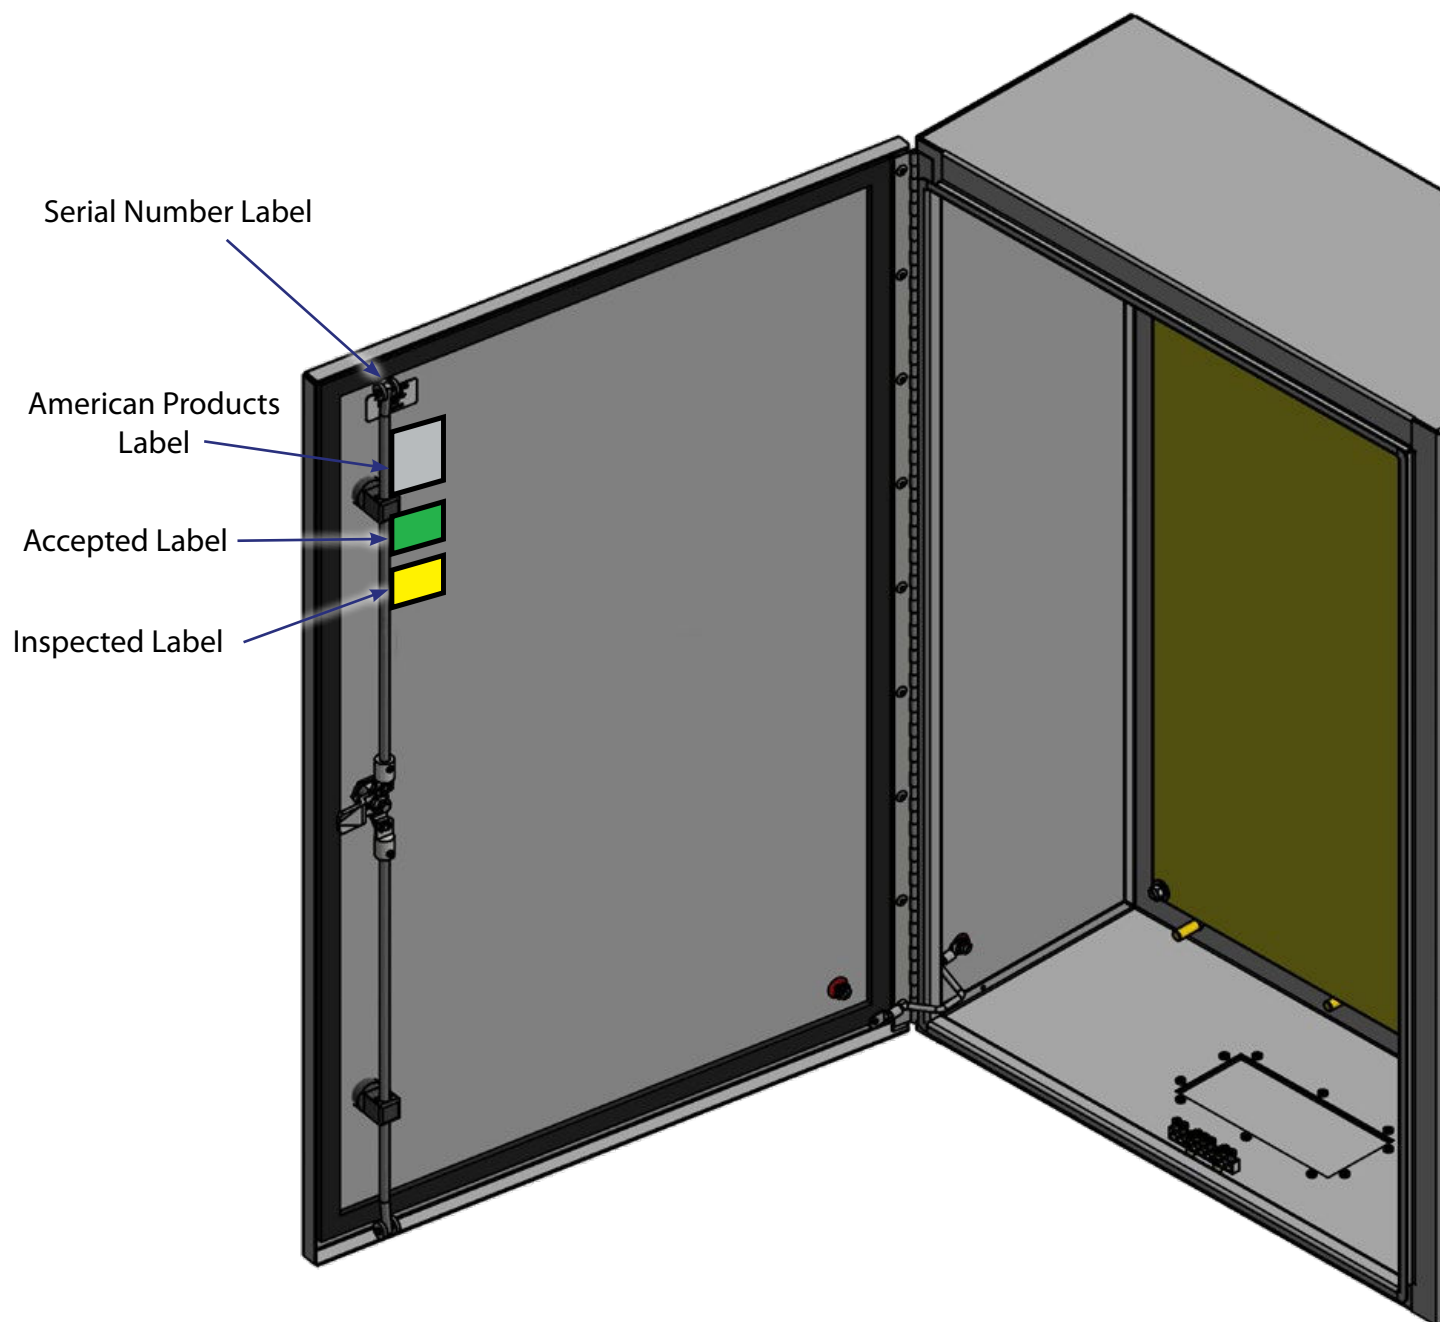

AP UTILITY™ Wall Mount Enclosure for Type 4

Enclosures with Optional Ventilation & Filter Pockets are Type 3R

 
Powder Coating Tested to Standards:
Telcordia GR487 for Telecommunications Enclosures

Product Overview


- The cabinet is constructed of Aluminum or Galvanized Steel with GR487 Compliant powder coat painted finish for reduced weight and superior corrosion resistance. The front door is equipped with three point pad-lockable door latches. The top of the cabinet has a double wall construction to reduce the effects of solar radiation and for structural integrity.
- The cabinet utilizes stainless steel hardware, UL recognized EPDM edge gasketing (temp range of - 40F to +212 F.
- When installing cabling or equipment that enters the cabinet, Type 4 entrances, fittings or equipment is to be used to maintain the integrity of the enclosure
- The cabinet is designed to allow various accessories to be mounted on the enclosure to meet customer requirements. For part number structure for parent enclosure and accessories see diagram below:

PART NUMBERING EXAMPLE

Cabinets

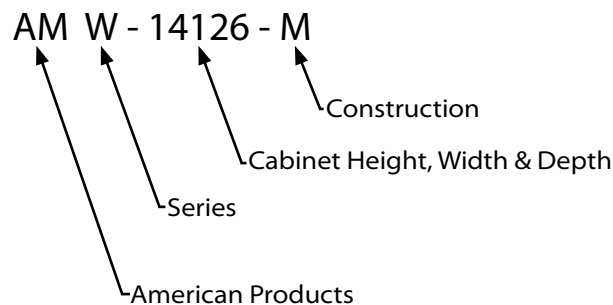


Accessories

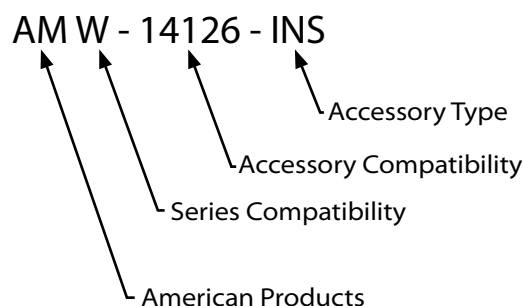 

Product Specifications


Single
Quarter
Turn Pawl

 **Available
Cabinet
Sizes**

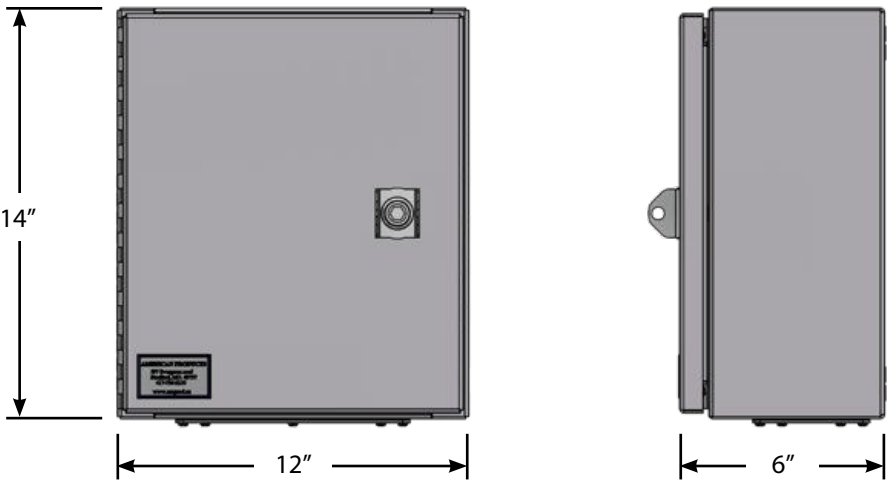


Double
Quarter
Turn Pawl

 **Available
Cabinet
Sizes**

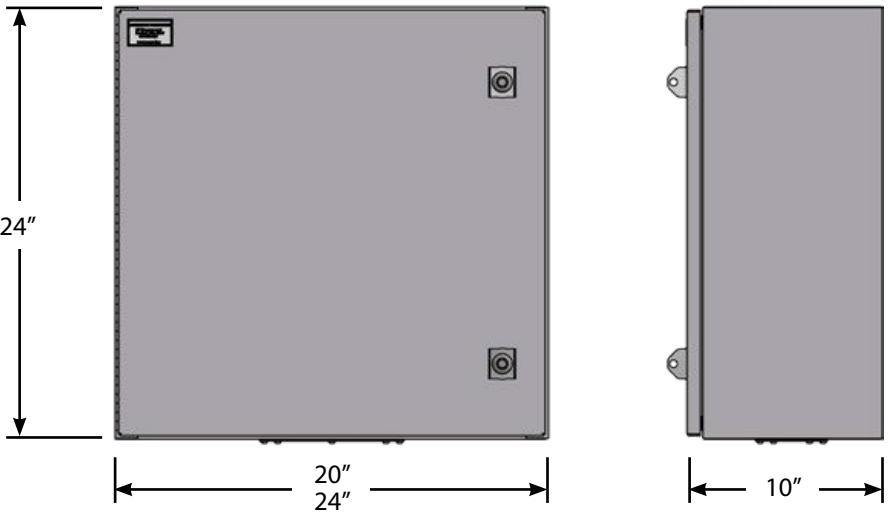

Three
Point
Latch

 **Available
Cabinet
Sizes**

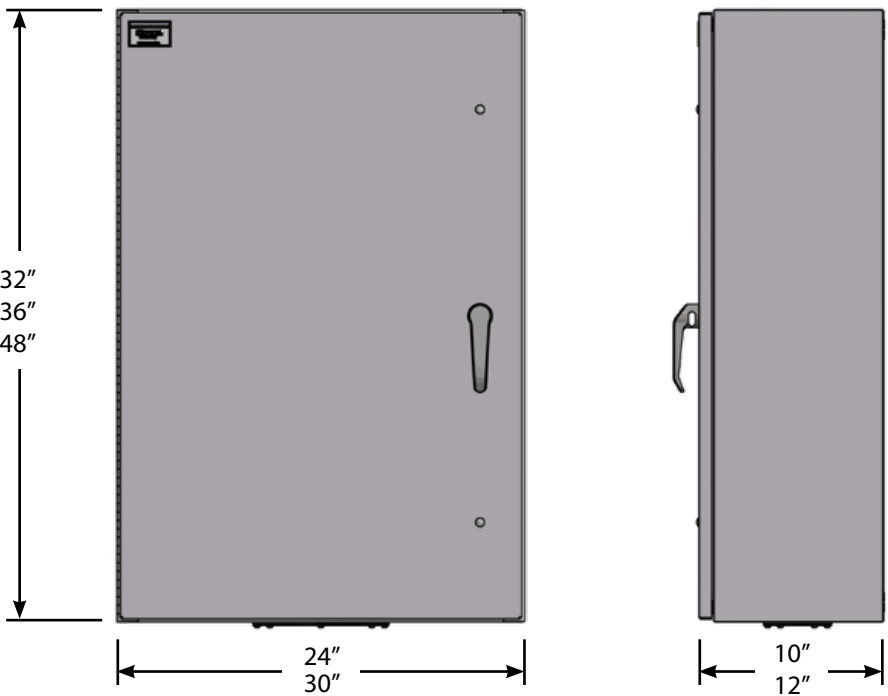


Installation

The AP UTILITY™ cabinet should be mounted on sturdy surface. See the figure for mounting kit assembly.




WARNING

 During cabinet mounting, fixture the cabinet securely to avoid personal injury or cabinet damage.

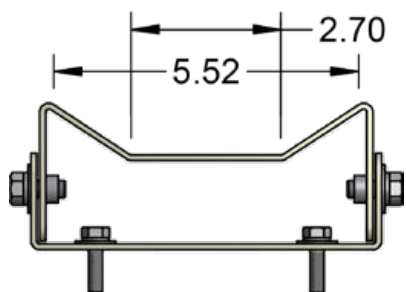

*Pole Bracket
Profile Dimensions*

 Rear View with Pole Mount Brackets Installed

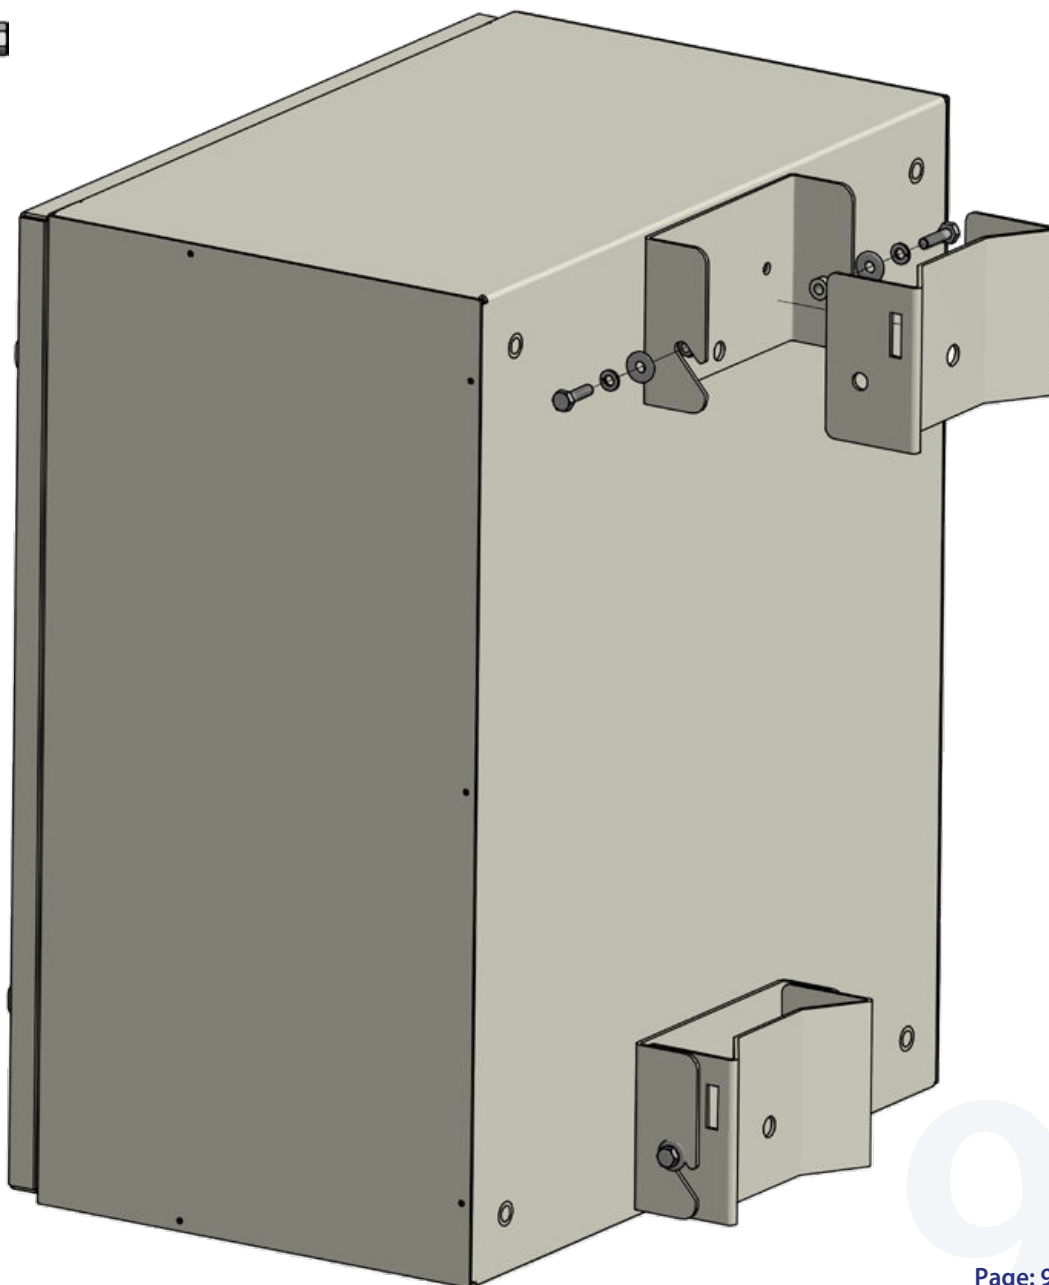

Installation

 
The AP UTILITY™ cabinet should be mounted on sturdy surface. See the figure for mounting kit assembly.



WARNING

During cabinet mounting, fixture the cabinet securely to avoid personal injury or cabinet damage.

Rear View with Wall Mount Brackets Installed

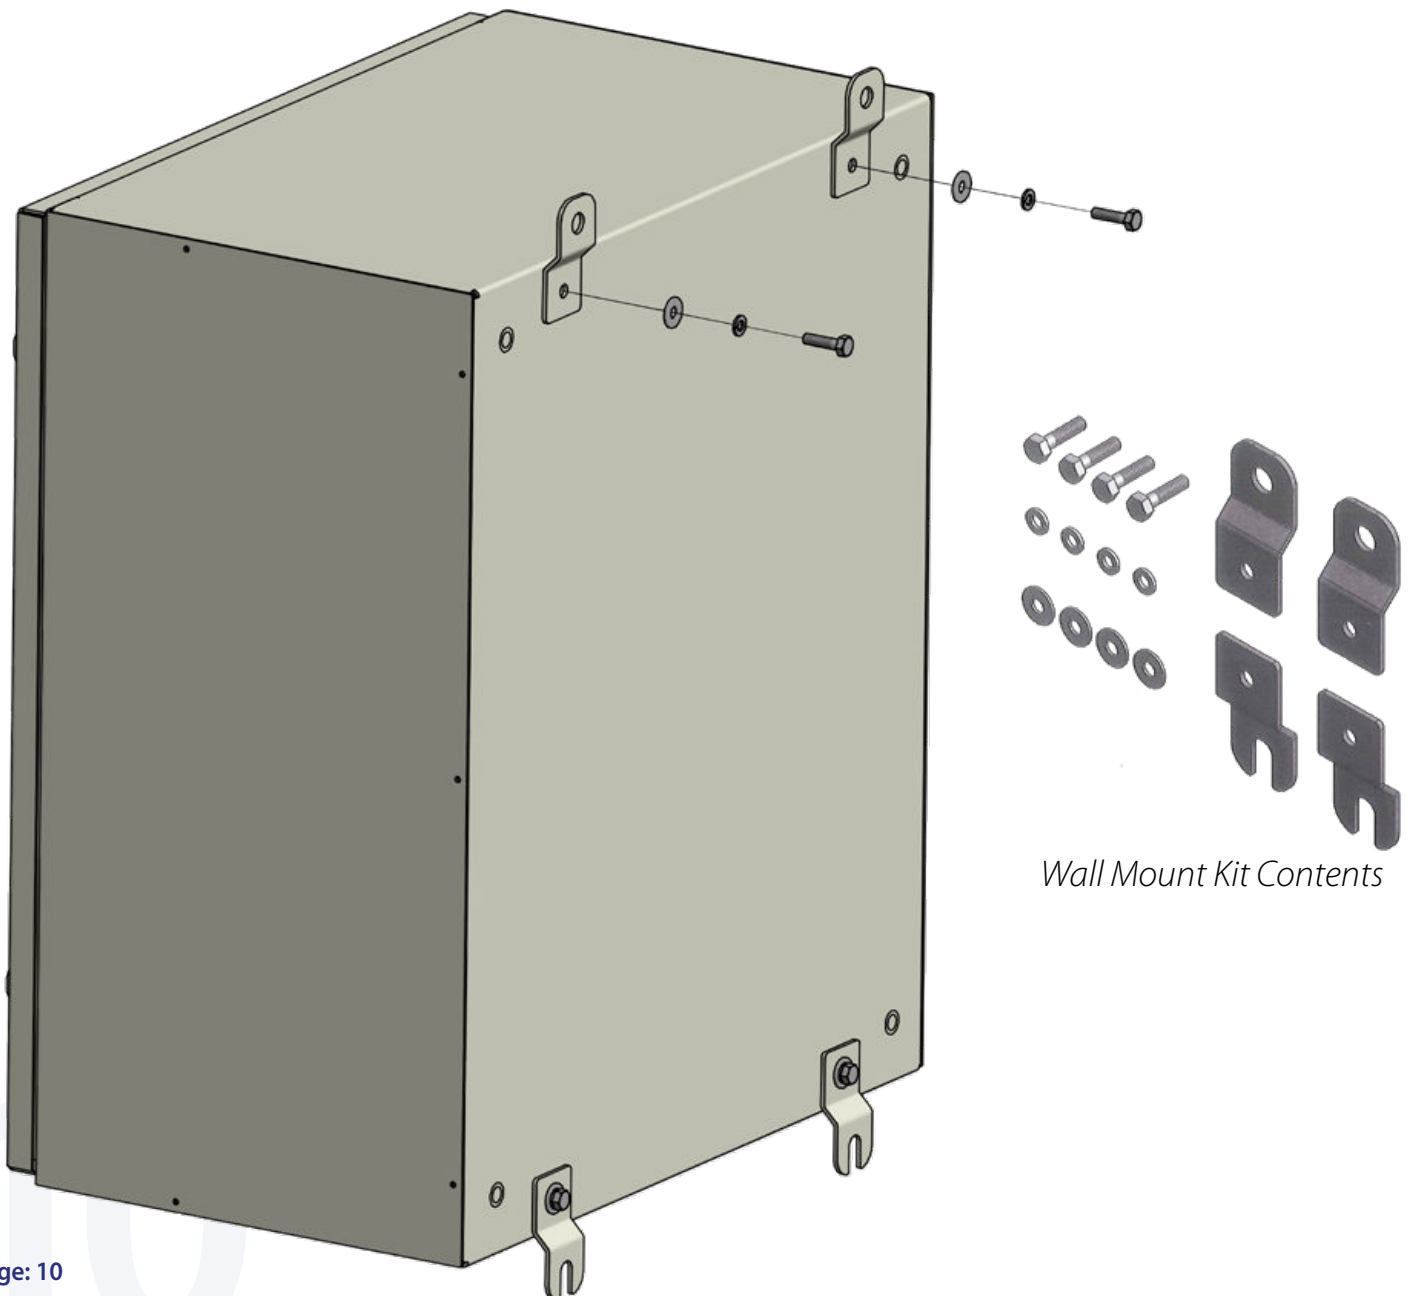


Wall Mount Kit Contents

Clearance Requirements


When selecting a location to mount the cabinet, ensure that proper clearance is available to allow the cabinet door to open fully.

 Top View

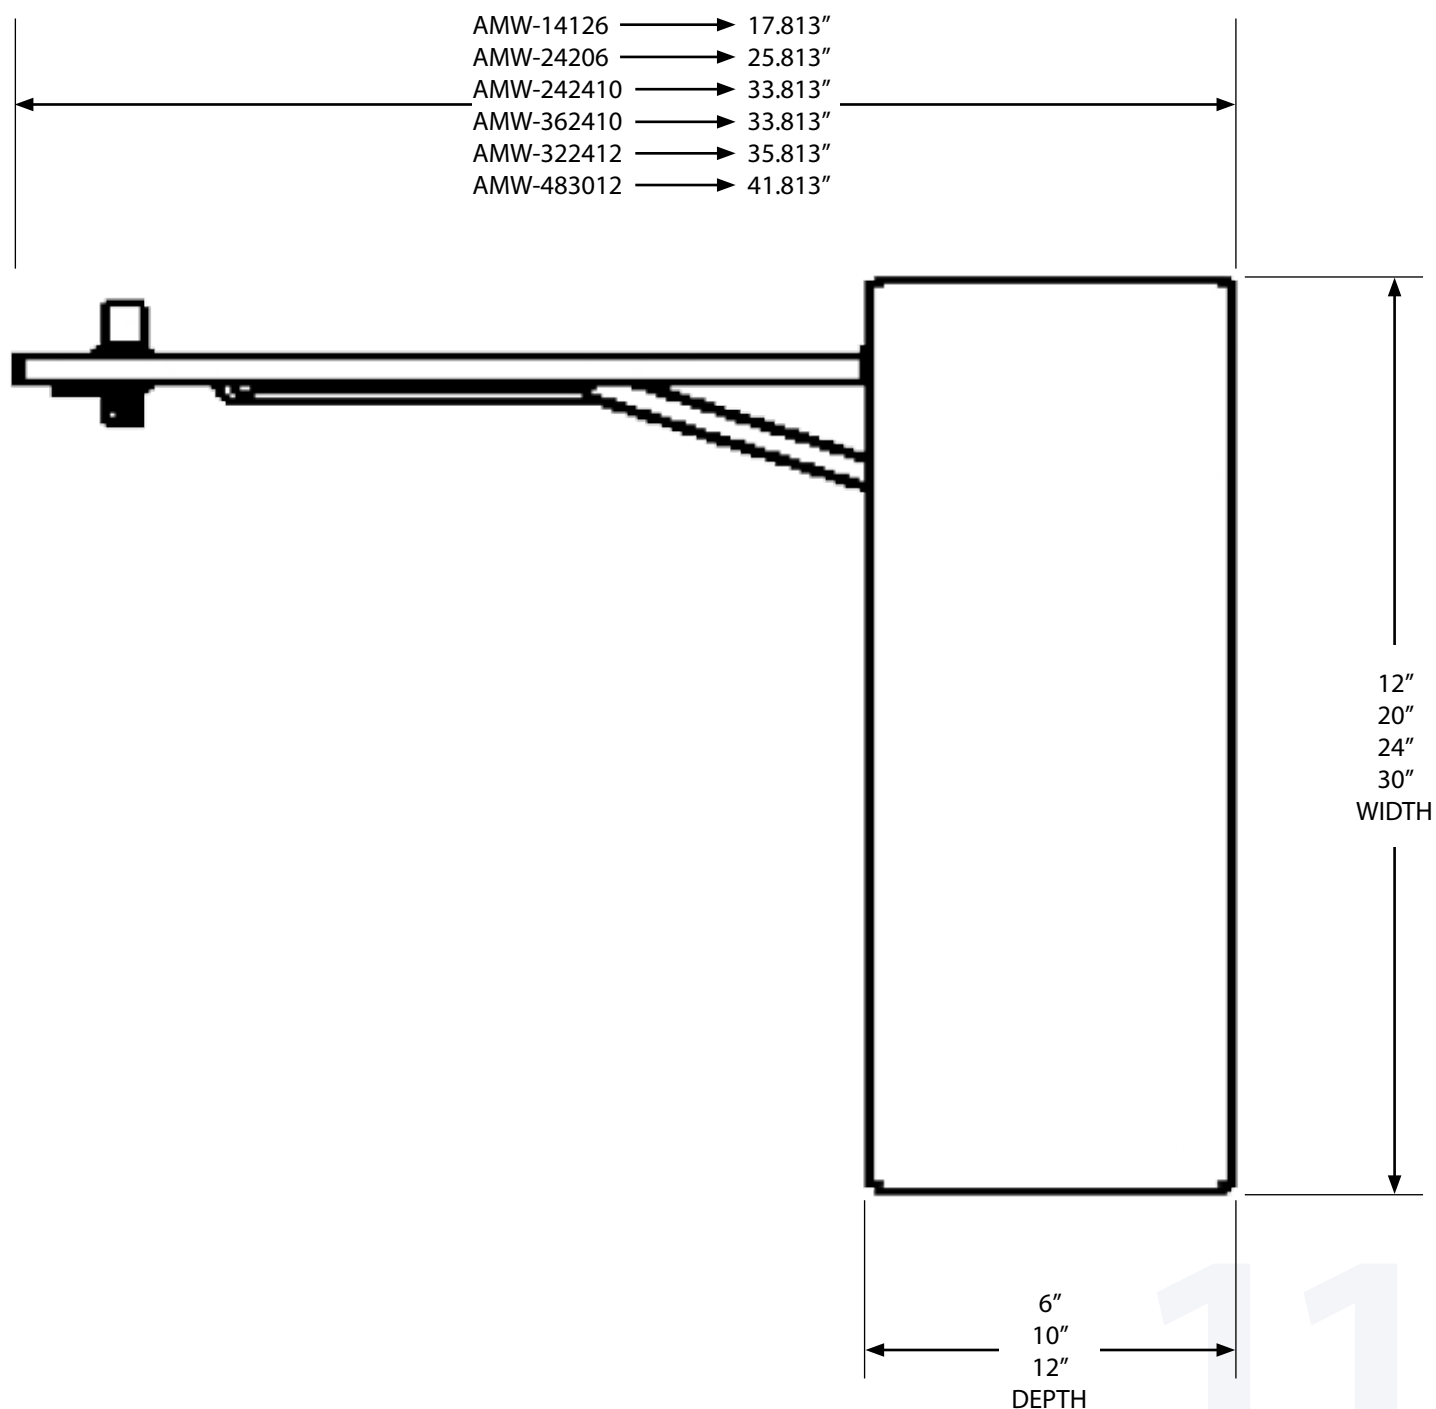


Grounding Information

 Bonding and grounding should be done in accordance with industry standard procedures and comply with local electrical codes. The main cabinet ground bar is located in the front of the cabinet as shown below.

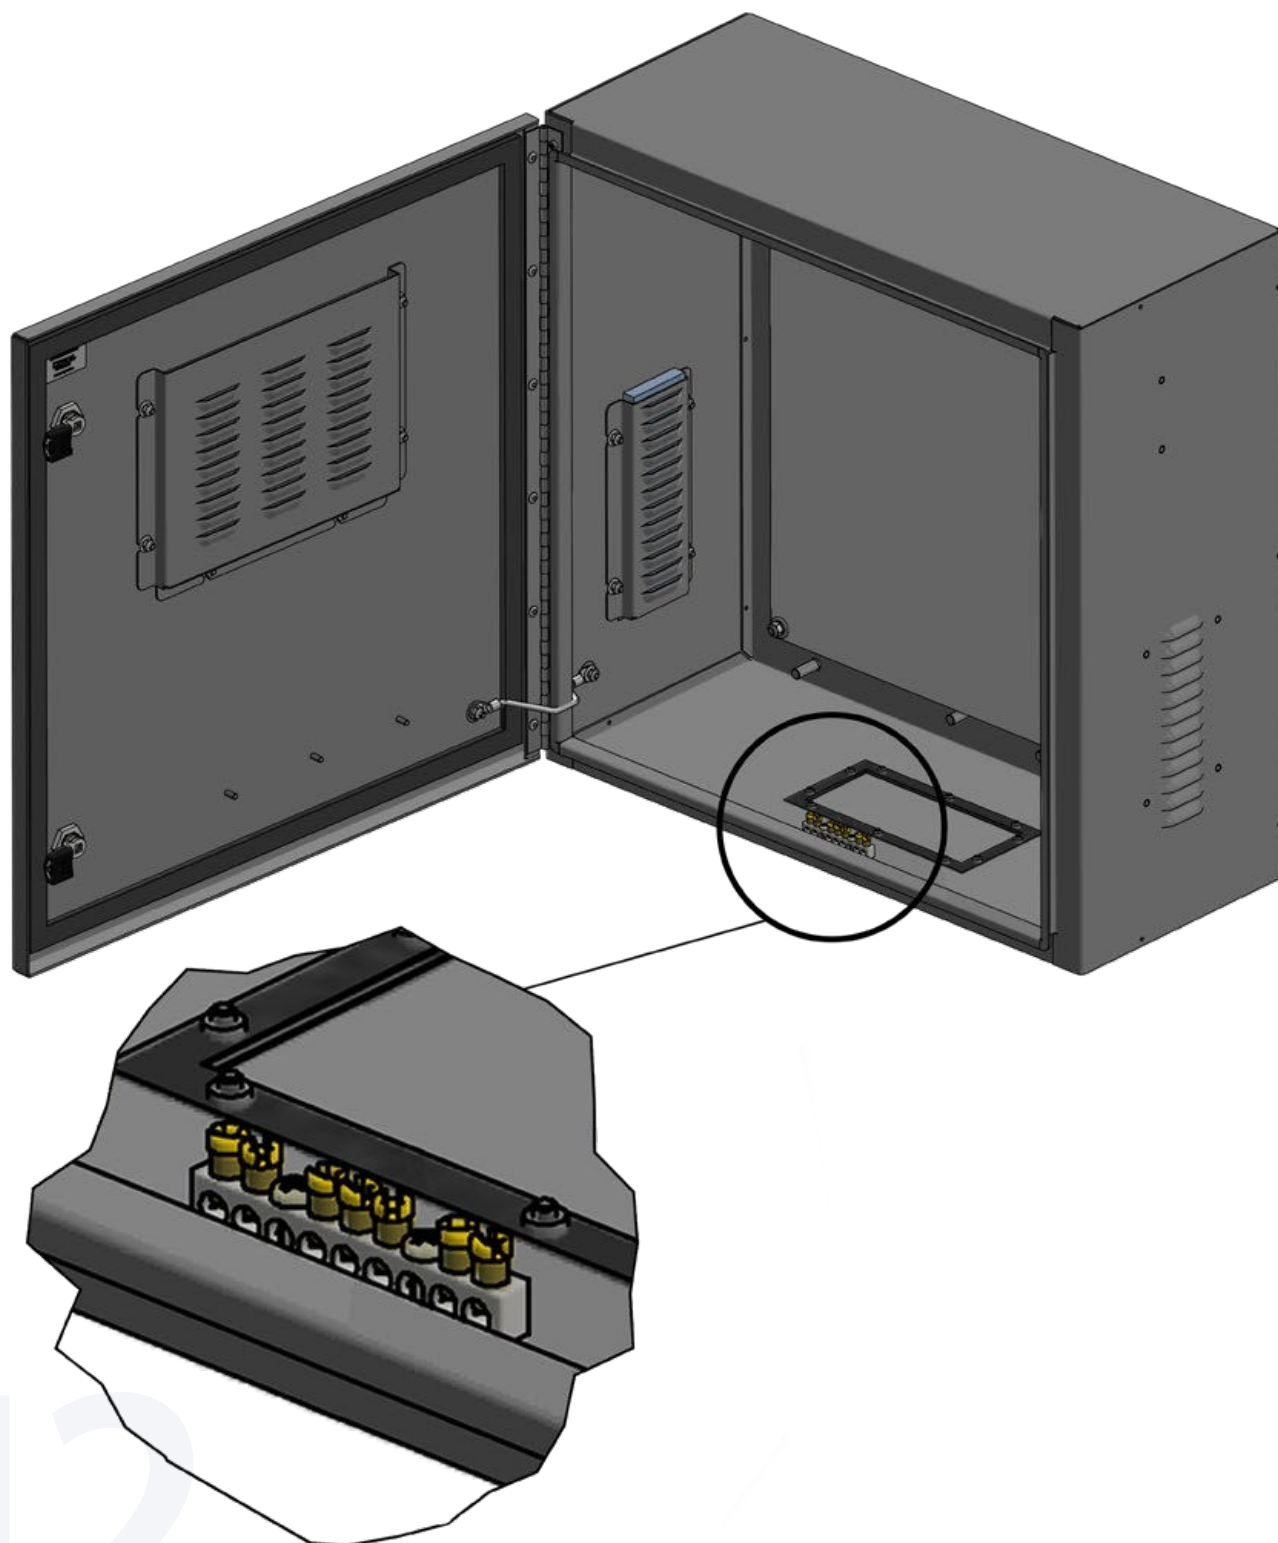

Quarter Turn 3-Point Locking Door Latches

 The cabinet doors are equipped with quarter-turn 3-point padlock-able door latches. The latches are secured by turning the handle a quarter turn clockwise until the stop is reached. Convenient security padlock hole to allow for a standard padlock to be installed. With a padlock on the latch, access door cannot be opened protecting the cabinet from undesired intrusion.

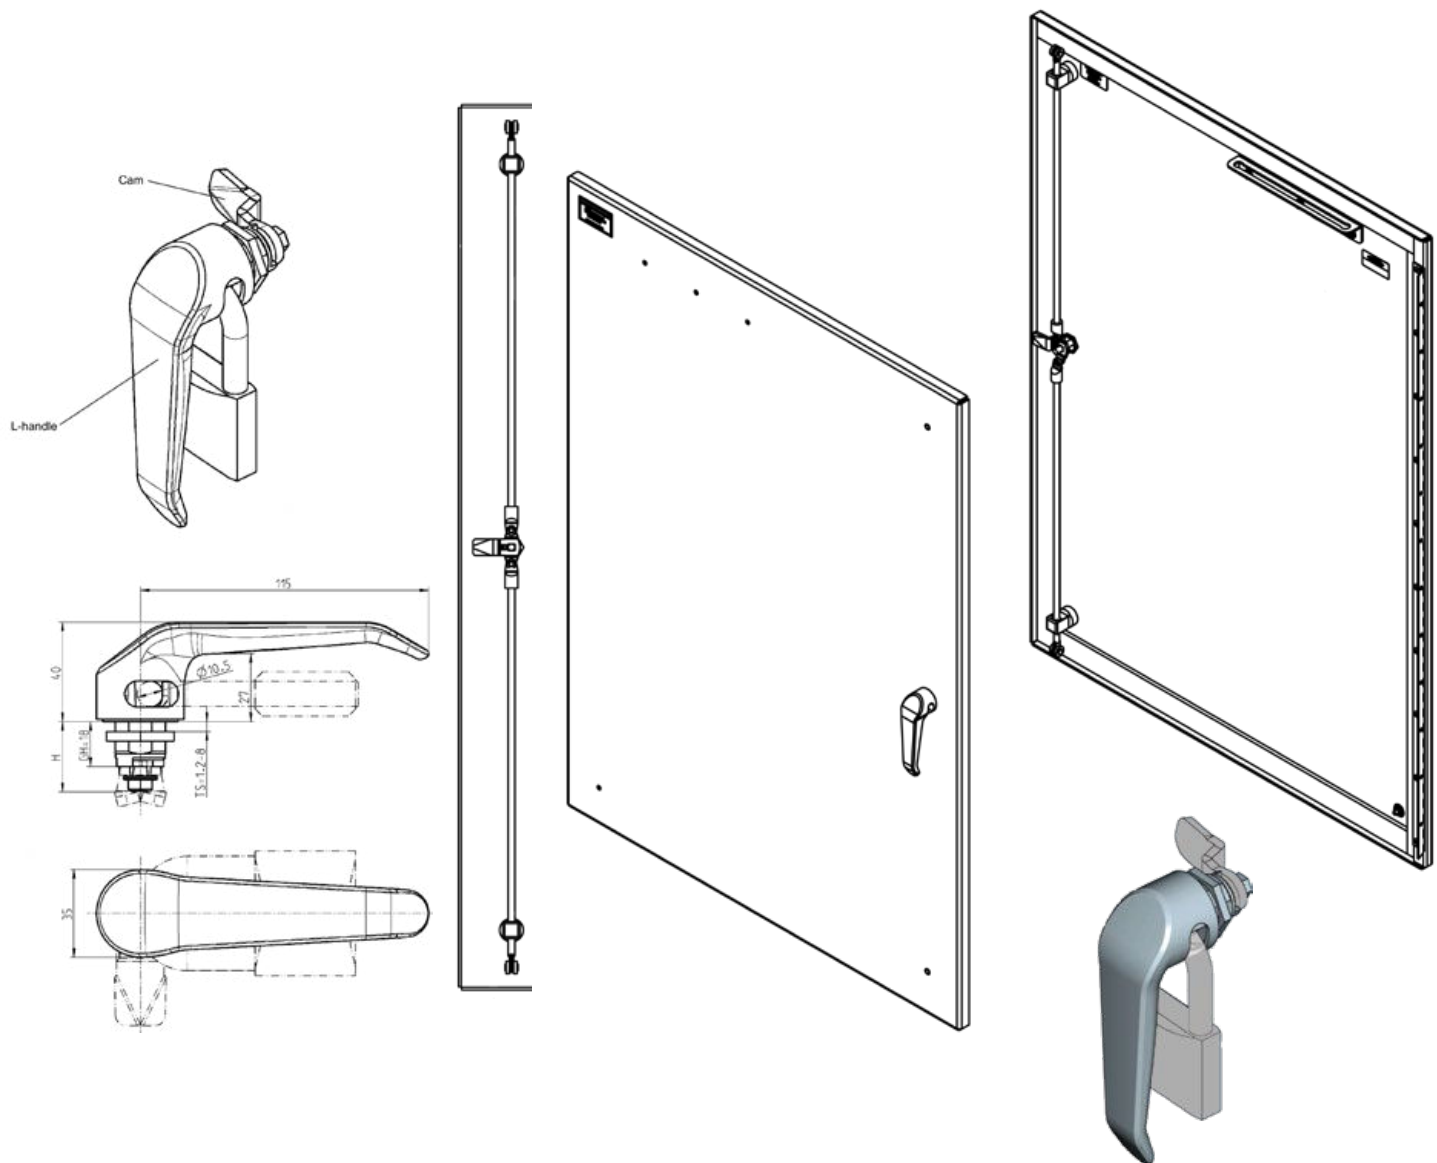

Quarter Turn 3-point Padlock-able Door Latch

THIS PAGE INTENTIONALLY LEFT BLANK

Warranty Policy

Enclosures designed and manufactured by American Products shall be warranted to be free of defects in material or workmanship for a period of 5 years (U.S. & Canada) and 3 years for International deployments from the date of shipment. Should the product be proven to be defective, American Products will have the option to repair or replace the product. Items included with the enclosures, not manufactured by American Products, will carry the original manufacturer's warranty.

It is the responsibility of the buyer to communicate any special environmental concerns in which the enclosures will be utilized. Special materials may be required to allow for proper corrosion resistance for harsh environments. The warranty does not cover enclosures used in applications and environments for which they were not designed. Warranty does not cover abuse, modifications by others or reimbursement for unauthorized rework. At no time will American Products reimburse purchaser for unauthorized rework on any product.

Under no circumstances is American Products liable for any consequential damages, liquidated damages, loss in profits or revenues, costs of capital, downtime costs or damages related to our product performance.

Warranty Claims

Enclosures found to be defective will be repaired or replaced with the same or comparable product. All warranty claims must be communicated to our customer service (855) 736-2135 department to obtain an RMA number. For warranty claims in the USA and Canada, freight will be managed and paid by American Products. For warranty claims outside of the USA and Canada, the customer will be responsible for managing the freight and freight expenses. Products being returned from other than US or Canada are to be returned to the factory in Strafford, MO to receive warranty resolution, once approved with an RMA.

Except for the express warranty stated above, American Products makes no other warranties with respect to the product, expressed or implied, including but not limited to merchantability or fitness for a particular purpose.



597 Evergreen Road Strafford, Missouri 65757

Phone: 417-736-2135 Toll Free: 855-736-2135

www.amprod.us